
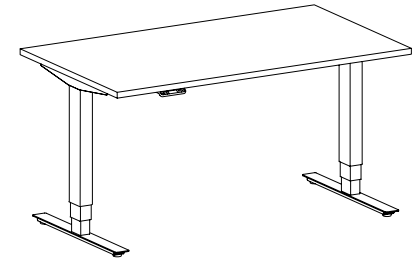




balma

**S4**  
DESK WITH ELECTRIC HEIGHT ADJUSTMENT



**V**

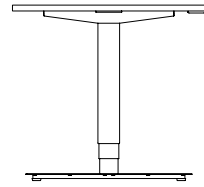

**UP**

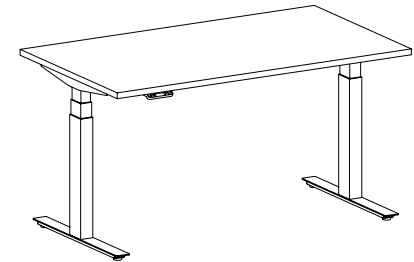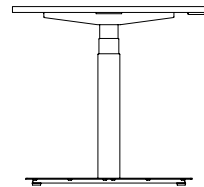

**UP 2**

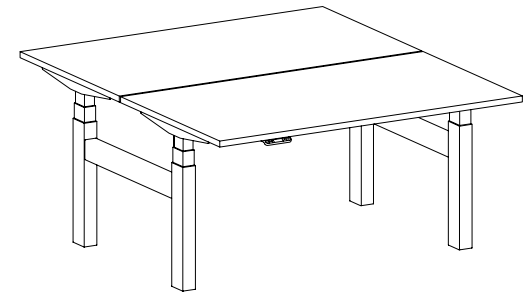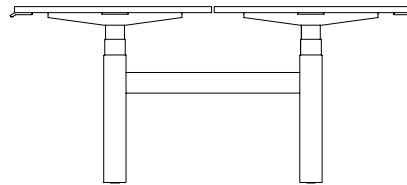

---

User Manual

**1. Electric height adjustment** | 3-5

1.1 Technical information

1.2 Getting Started

1.3 Programming the adjustment range


1.4 Saving positions in memory

1.5 Reset

**2. Safety instruction** | 6

**3. Troubleshooting** | 6

**1. Desk with electric height adjustment**

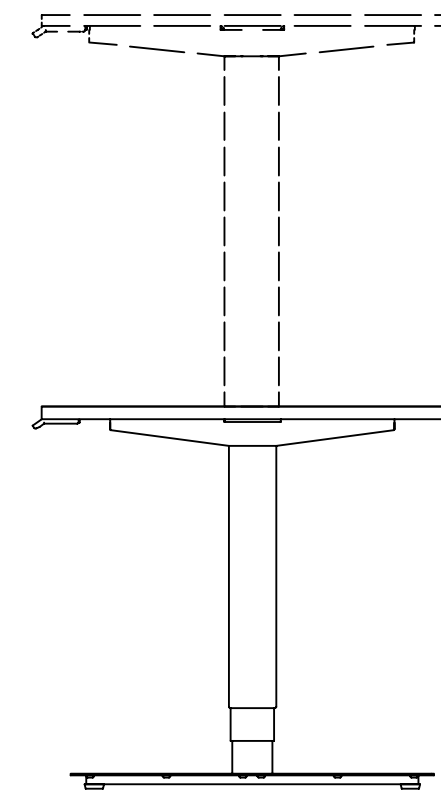

**1.1 Technical information**

- max. load: 100 kg
- max. speed: 42 mm/s without load
- Standard stroke length: 480 mm
- Noise level: < 42 dB
- Anti-collision protection
- Duty cycle: 5% ~ 1 minute of continuous use at full load followed by a 19-minute break

## 1.2 Getting Started

### First run

Make sure that nothing prevents the free movement of the desk. The length of the cables should be sufficient to allow the frame to move through the entire operating range. Once the desk has been successfully installed, position it in its final location and level it. Always ensure that no obstacles are placed under, above or adjacent to the desk. We recommend a clearance of min. 50 mm around the desk top.

### Reset procedure

Every time the desk is disconnected from the power supply, it must be reset when reconnected. This will ensure proper functioning. Lower the table to the lowest position by pressing the down arrow on the remote control. Release the button. Press the button again and hold it for 10 seconds. The desk is ready to go!

**Attention!** If any of the motor cables have been disconnected from the power supply, the reset procedure must be performed again.

## 1.3 Programming the adjustment range

Used to limit the pitch of the frame. Limitations can be set as shown in the following figures:


To restrict downward movement.

To restrict upward movement.

To limit traffic in both directions.

### Important!

Limits must be set on each side of the center of the jump (see diagram).

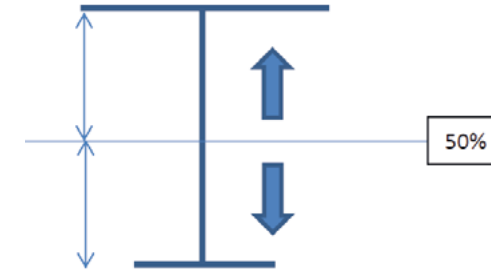

### Programming

To set the lower limit

Set the table top at the required height where it should stop. Then press the two buttons: up arrow and down arrow on the remote control and hold them for 3 seconds, then while still holding down the down arrow, press the „up” arrow 3 times until you hear a „beep” sound from the control unit, release the buttons. The tabletop position is now set and activated.

To reset this setting, perform the operation again.

To set the upper adjustment range - follow the same steps, but to program, press the „down” arrow 3 times.



	up		I position memory button
	down		II position memory button
	save		III position memory button
			VI position memory button

## 1.4 Saving positions in memory

This function saves the set position of the table top.

4 memory positions can be saved.

1. Move the table to the desired height
2. The display shows the height of the tabletop (e.g. 73 cm)
3. Hold down the SAVE key until the display flashes
4. Press a memory position key (e.g. 2)
5. The display shows P 2
6. After about two seconds, the height of the tabletop will be fixed and displayed again

## 1.5 Reset

Frame reset is possible even if range(s) of motion has been programmed.

1. Before performing the reset procedure, remove any obstacles placed under the desk.
2. Reset procedure: Lower the frame to the point where is the lower limit of the range of motion.

Hold the down arrow on the remote control for 5-10 seconds, to start the reset procedure. The frame will now move to the lowest position where it will be reset. Press the up arrow button and move the table above the lower setting. The frame is back in normal mode.

### Note!

The range of motion is not a permanent programming of the control unit, it can be deactivated in the same way as when activated.

### Note!

The adjustment range settings will remain even after the frame is reset.

## 2. Safety instructions

The desk has been tested and found suitable for public and home use. When using the height adjustment mechanism, always observe basic precautions, including:

### **Warning:**

To reduce the risk of burns, fire, electric shock electric shock or injury:

1. Always unplug the device from the electrical outlet before cleaning.
2. Unplug the device from the socket before installing/removing additional parts.
3. Close supervision is necessary when the mechanism is operated by or near children or disabled people.
4. Use the desk only for its intended purpose as described in this manual.
5. Never use the height adjustment mechanism if it has a damaged cord or plug, if it is not working properly.
6. To disconnect, remove the plug from the outlet.

## 3. Troubleshooting

When the desk is not working properly, it must be reset. If it doesn't help, disconnect the power and reconnect after 30 seconds. Then follow the steps as for the first one starting.

balma

**FABRYKA MEBLI BALMA S.A.**  
UL. POZNAŃSKA 167  
62-080 TARNOWO PODGÓRNE  
POLAND

T: +48 61 89 66 400  
E: [export@balma.pl](mailto:export@balma.pl)

**[www.balma.eu](http://www.balma.eu)**